



Wall mounting hardware

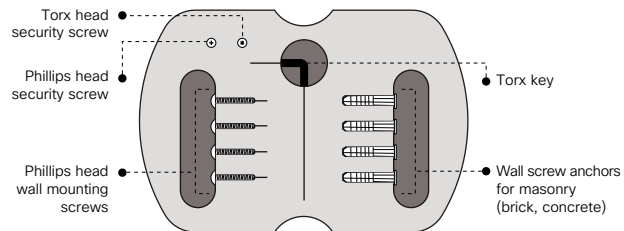

T-rail mounting hardware

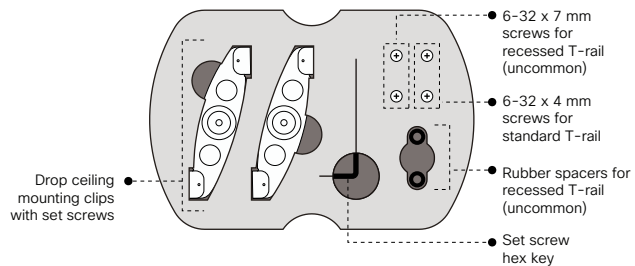


T-rail mounting instructions

To mount your MV21 on a drop ceiling T-rail, use the included hardware. The hardware can be used to mount to most 9/16", 15/16", or 1 1/2" T-rails.

Step 1


Attach the T-rail clips to the T-rail by rotating them and snapping them into place as shown.

The black foam pads should be compressed slightly after installation.

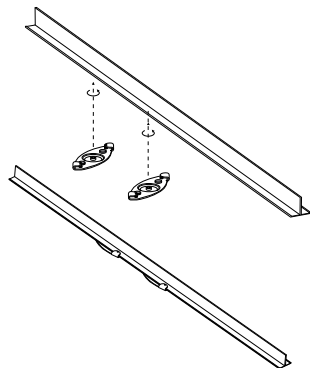


Step 2

Using the dashed lines on the mount plate template as a guide, set the proper spacing of the clips.

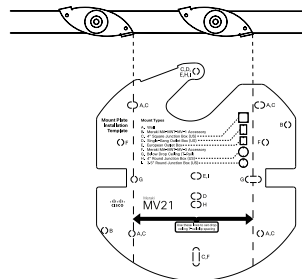


Step 3

Tighten the set screws on the T-rail clips and secure them using a 5/64" (2 mm) hex key.

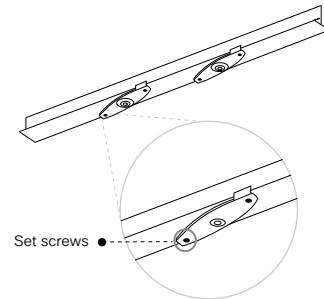


Step 4

Attach the mount plate to the T-rail clips using the mount plate holes (marked with a "G").

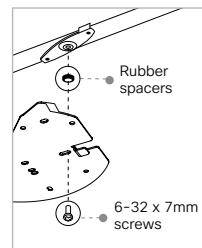

Modifications for recessed T-rail

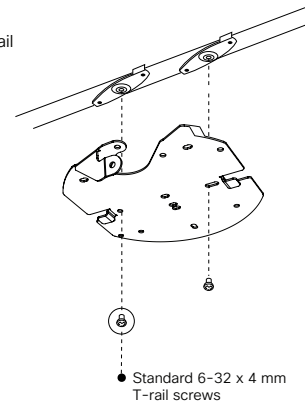

Meraki MV21 Cloud-Managed Indoor HD Dome Camera

Package Contents



Documentation & Support

Start here: docs.meraki.com/mv

Meraki

MV21

Wall mounting instructions


Step 1

Leave protective plastic sticker on camera bubble.



Step 2


Use template to determine mounting hole locations before screwing in the mount plate.

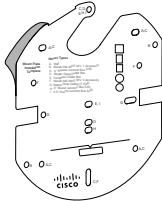

Peel backing from mount template to stick on wall.

Step 3

Screw the mounting plate onto the wall in pre-determined locations.

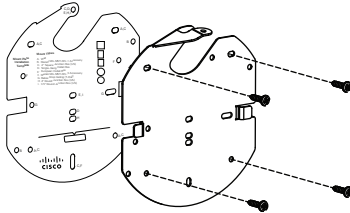

Use template holes marked with the letter "A" for standard wall mounting.

Step 4


Connect PoE cable to camera.

For cords that will exit the top of the camera, loop the cable inside the camera as shown.




Step 5

Slide camera over top of mount plate and slide down into mount plate hooks. Secure with Phillips or Torx head safety screw.

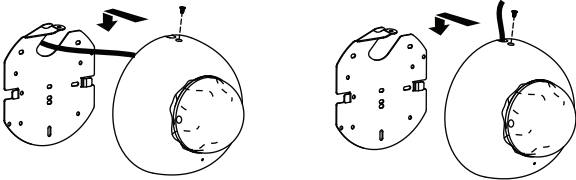


Step 6

Turn bubble counter clockwise to unlock. Hinge bubble off of body to remove.

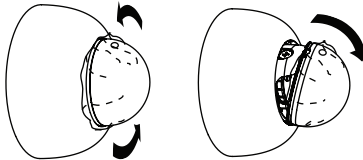






Step 7

Pinch near thumb screws and pull straight away from the camera to remove lens guard.

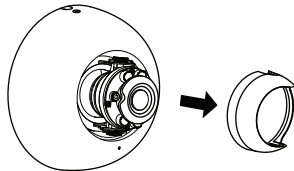


Step 8

 

Aim the lens.

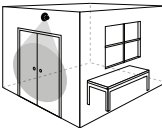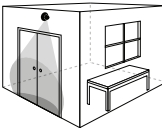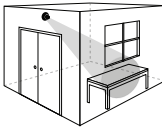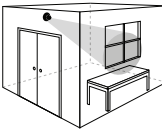



TILT (65° MAX)

 

TWIST (350° MAX)

 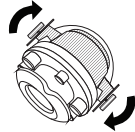


ROTATE (350° MAX)

 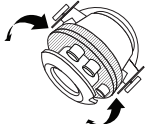

Step 9


Replace lens guard and bubble. Turn bubble clockwise to lock.

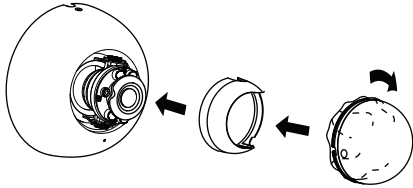

Step 10

Remove protective plastic sticker. Check LED function.

Use the Meraki Dashboard to adjust camera focus and configure other settings.

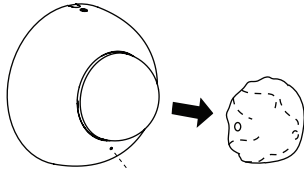

Check LED function. Refer to table below.

LED Activity	Camera Status
Solid Green	Device powered on
Off	Device powered off or running in dark mode
Flashing Green	Firmware upgrade in progress